


Warning: It is a requirement to check  
airstrip condition and details with owner

# Northam, WA

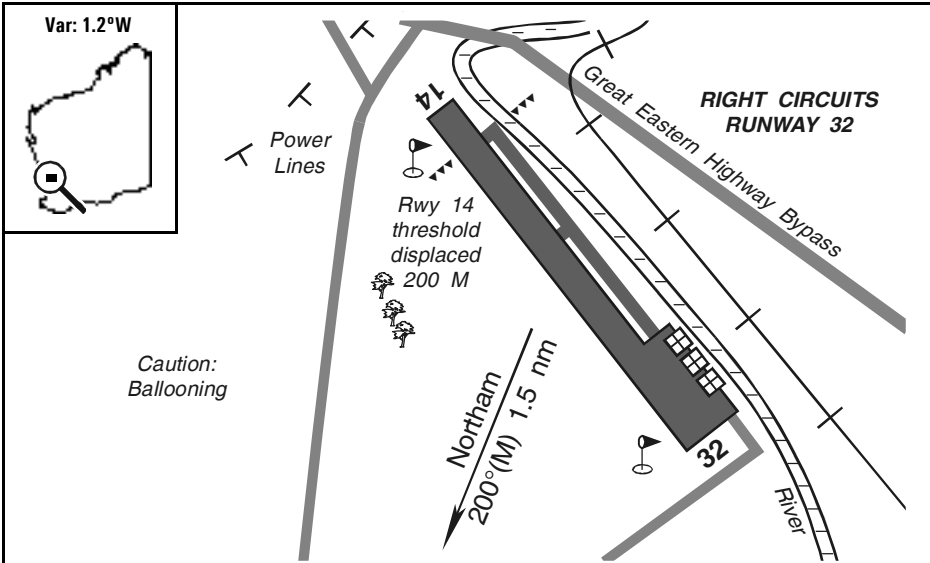

NORTH TO THE TOP - DRAWING NOT TO SCALE

<b>Elevation:</b>	500 Feet AMSL	<b>Time Zone:</b>	UTC + 8
<b>GPS Position:</b>	31° 37.676' South 116° 41.227' East	<b>Area Forecast:</b>	60
<b>WAC Charts:</b>	Perth (3351), Albany (3462)	<b>ALA Code:</b>	YNTM
<b>Owner/Operator:</b>	Northam Aero Club (08) 96223248, webmaster@northamaeroclub.com		
<b>Strip Directions:</b>	14-32		
<b>Strip Lengths:</b>	950 M (the 14 threshold is displaced 200 M)		
<b>Strip Surface:</b>	Sealed		
<b>Windsock:</b>	Two - one positioned at each end		
<b>Strip Markers:</b>	White cones		
<b>Lighting:</b>	LIRL, AFRU + PAL - VHF 124.2 (3 transmissions x 1 second maximum)		
<b>Fuel:</b>	Northam Air Services (08) 96221550 weekdays only, or by prior arrangement		
<b>Special Procedures And Remarks:</b>	CTAF 124.2. Melbourne Centre 120.3 (in the circuit). Beware power lines on the Great Eastern Highway Bypass. Right hand circuits runway 32. Avoid back tracking, use taxiways. Turbulence near runway 14 threshold in strong easterly winds. Caution ultralight flight training, ballooning. Fenced at both ends. Public toilets at airfield. Parking in front of Aero Club hangar reserved for fire fighting aircraft. Curfew for repetitive training circuits 2100 WST (1300 UTC). For latest information: Denis Beresford (08) 96225222 (phone/fax) or Simon Cooper 0429 202 597 (mobile) or visit our website <a href="http://www.northamaeroclub.com">www.northamaeroclub.com</a> . Cross check details with ERSA.		